

# **LINETRAXX® VMD420**

Multi-functional voltage relay for 3(N)AC systems, frequency/overvoltage/undervoltage, phase, phase failure, asymmetry



## **LINETRAXX® VMD420**

# Multi-functional voltage relay for frequency, overvoltage, undervoltage, phase sequence, phase failure and asymmetry monitoring in 3(N)AC systems



#### **Device features**

- Undervoltage, overvoltage and frequency monitoring in 3(N)AC systems 0...500 V
- Asymmetry, phase failure and phase sequence monitoring
- Various monitoring functions selectable
   U, > U, < f, > f
- Start-up delay, response delay and delay on release
- · Adjustable switching hysteresis
- r.m.s. value measurement (AC+DC)
- Digital measured value display via multi-functional LC display
- Preset function (automatic setting of basic parameters)
- · LEDs: Power On, Alarm 1, Alarm 2
- Measured value memory for operating value
- · Continuous self monitoring
- Internal test/reset button
- Two separate alarm relays (one changeover contact each)
- N/C or N/O operation and fault memory behaviour selectable
- Password protection for device setting
- · Sealable transparent cover
- Two-module enclosure (36 mm)
- Push-wire terminal (two terminals per connection)
- RoHS compliant

### **Approvals**







#### **Product description**

The multi-functional VMD420 series voltage relay is designed to monitor the frequency, undervoltage and overvoltage and the voltage between two threshold values in 3(N)AC systems. The voltages are measured as r.m.s. values. The currently measured value is continuously shown on the LC display. The measured value required to trigger the alarm relay is stored. Due to adjustable response times, installation-specific characteristics, such as device-specific start-up procedures, short-time voltage fluctuations, etc. can be considered. The devices require an external supply voltage.

#### **Typical applications**

- Monitoring of voltage-sensitive machines and electrical installations
- Switching machinery and equipment on and off at a certain voltage level
- · Monitoring of stand-by and emergency supply systems
- Supply voltage monitoring of portable loads
- Protection of three-phase motors against phase failure and phase open-circuit
- · Transformer protection, asymmetrical load can be recognised

#### **Function**

Once the supply voltage is applied, the start-up delay "t" begins. Measured voltage and frequency values changing during this time do not influence the switching state of the alarm relays.

The devices feature two separately adjustable measuring channels (overvoltage/undervoltage). When the measuring quantity exceeds the response value ("Alarm 1") or falls below the response value ("Alarm 2"), the time of the response delays " $t_{on1/2}$ " begins. Once the response delay has elapsed, the alarm relays switch and the alarm LEDs light up. When the measuring value exceeds or falls below the release value (response value plus hysteresis) after the alarm relays have switched, the selected release time " $t_{off}$ " begins. When " $t_{off}$ " has elapsed, the alarm relays switch back to their initial position. When the fault memory is activated, the alarm relays remain in alarm position until the reset button "R" is pressed. When the fault memory is set to continuous mode, the alarm parameters remain stored, even on failure of the supply voltage.

#### **Preset function**

After connecting the device for the first time, the nominal system voltage will be determined (PrE run), and the response values for overvoltage and undervoltage as well as for underfrequency and overfrequency will automatically be set. When no voltage is determined within a nominal system voltage range (PrE run), the response values will be set to the minimum or maximum voltage. In this case, the message "AL not SET" appears on the display. As long as no button is pressed, a nominal system voltage is being searched cyclically (PrE run). If a button is pressed, the search will be interrupted and the message "AL not SET" disappears. In this case, the appropriate response values have to be set in the menu. When activating the frequency monitoring function, the preset frequency will automatically be stored.

### Standards


The VMD420 complies with the requirements of

• DIN EN 45545-2.





## **Operating elements**

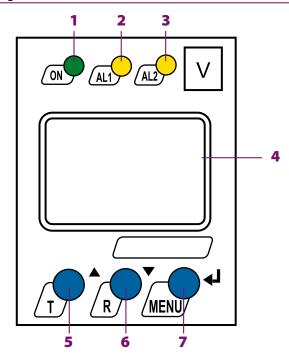


- 1 Power On LED "ON" (green); lights when supply voltage is applied and flashes in the event of system fault alarm
- 2 Alarm LED "AL1" (yellow), lights when the set response value >U/<f/>f/>f >f/Asy/PHS is exceeded and flashes in the event of system fault alarm
- 3 Alarm LED "AL2" (yellow), lights when the set response value >U/<f/>f/>f >f/Asy/PHS is exceeded and flashes in the event of system fault alarm
- 4 Multi-functional LC display
- 5 Test button "T": Arrow up button: to change the measured value display, move upwards in the menu or to change parameters
- To call up the self test: press the button "T" >1.5 s
- 6 Reset button "R":
   Arrow down button: to change the measured value display, move downwards in the menu or to change parameters
   To delete stored alarms: press the button "T" >1.5 s
- 7 "MENU" button:
   Enter button: to confirm the measured value indication or to confirm changed parameters


   To call up the menu system, press the button "T" >1.5 s


Press the ESC button >1.5 s to abort an action or to return to the previous menu level

When the menu item LEd is activated, the alarm LED "AL1" indicates that K1 is in the alarm state. When "AL2" lights up, K2 is in the alarm position.

#### Wiring diagram

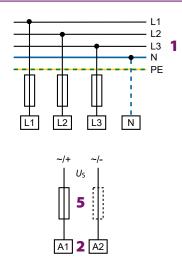

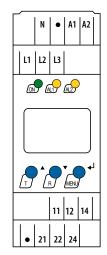

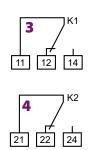

- 1 L1, L2, L3, (N) Connection to the system/load to be monitored
- **2 A1, A2** Supply voltage  $U_s$  (see ordering information)
- 3 **11, 12, 14** Alarm relay "K1": Configurable for *U*</*U*>/*f*</*f*>/Asy/PHS/ERROR
- 4 **21, 22, 24** Alarm relay "K2": Configurable for *U*</*U*>/*f*</*f*>/Asy/PHS/ERROR
- 5 Line protection according to IEC 60364-4-43:
   A fuse recommended recommended. If being supplied from an IT system, both lines have to be protected by a fuse.



# **Ordering information**

Supply voltage <sup>1)</sup> U <sub>S</sub>		Туре	Art. No.		
AC	DC	AC/DC	.,,	Screw-type terminal	Push-wire terminal
1672 V	9.694 V, 15460 Hz	-	VMD420-D-1	B93010005	B73010005
-	-	70300 V, 15460 Hz	VMD420-D-2	B93010006	B73010006


<sup>1)</sup> Absolute values


## Accessories

Type designation	Art. No.	
Mounting clip for screw mounting (1 piece per device)	B98060008	

# **Dimension diagram XM420**

Dimensions in mm

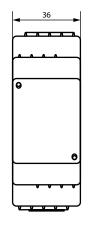

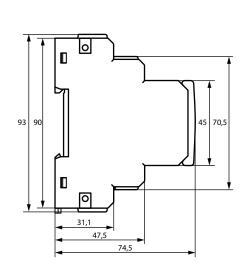

## **Technical data**

Rated insulation voltage	400 N		
Rated impulse voltage/pollution degree	4 kV/3		
Overvoltage category	II		
Protective separation (reinforced insulation) between	en		
(A1, A2) -(	N, L1, L2, L3) -(11, 12, 14) -(21, 22, 24)		
Voltage test acc. to IEC 61010-1:			
(N, L1, L2, L3) -(A1, A2), (11, 12, 14)	3.32 kV		
(N, L1, L2, L3) -(21, 22, 24)	2.21 kV		
(A1, A2) -(11, 12, 14) -(21, 22, 24)	2.21 kV		
Supply voltage			
VMD420-D-1:			
Supply voltage $U_{\rm S}$	AC 1672 V/DC 9.694 \		
Frequency range $U_{\rm S}$	15460 Hz		
VMD420-D-2:			
Supply voltage U <sub>S</sub>	AC/DC 70300 \		
Frequency range $U_{\rm S}$	15460 Hz		
Power consumption	≤ 4 VA		
Measuring circuit			
Measuring range (rms value) (L-N)	AC 0288 V		
Measuring range (rms value) (L-L)	AC 0500 V		
Rated frequency f <sub>n</sub>	15460 Hz		
Frequency display range	10500 Hz		

Response values			
Type of distribution system	3(N)AC/3AC (3AC)*		
Undervoltage $U < (Alarm 2)$ (measurement method: $3Ph/3n$ )	AC 6500/6288 V		
Overvoltage $U > (Alarm 1)$ (measurement method: 3Ph/3n)	AC 6500/6288 V		
Resolution of setting <i>U</i>	1 V		
Preset function for 3AC measurement:			
Undervoltage U $<$ (0.85 Un)* for Un $=$ 400/208 V	340/177 V		
Overvoltage U $>$ (1.1 Un)* for Un $=$ 400/208 V	440/229 V		
Preset function for 3(N)AC measurement:			
Undervoltage $U < (0.85 U_n)^*$ for $U_n = 230/120 \text{ V}$	196/102 V		
Overvoltage $U > (1.1 U_{\rm n})^*$ for $U_{\rm n} = 230/120 \text{ V}$	253/132 V		
Asymmetry	530 % (30 %)*		
Phase failure	by setting the asymmetry		
Phase sequence clockwise/a	nticlockwise rotation (off)*		
Relative uncertainty, voltage at 50/60 Hz	$\pm 1.5$ %, $\pm 2$ digits		
Relative uncertainty, voltage in the range 15460 Hz	±3 %, ±2 digits		
Hysteresis <i>U</i>	140 % (5 %)*		
Underfrequency Hz <	10500 Hz**		
Overfrequency Hz >	10500 Hz**		
Resolution of setting $f$ (10.099.9 Hz)	0.1 Hz		
Resolution of setting $f$ (100500 Hz)	1 Hz		
Preset function:			
Underfrequency for $f_n = 16,7/50/60/400 \text{ Hz}$	15,7/49/59/399 Hz		
Overfrequency for $f_n = 16,7/50/60/400 \text{ Hz}$	17,7/51/61/401 Hz		
Hysteresis, frequency Hys Hz	0.12 Hz (0.2 Hz)*		
Relative uncertainty, frequency range 15460 Hz	±0.2 %, ±1 digit		



# Technical data (continued)

Time response					
Start-up delay t				0300	) s (0 s)*
Response delay $t_{on1/2}$				) s (0 s)*	
Delay on release toff				0300 s	(0.5 s)*
Resolution of setting $t$ , $t_{on1/2}$ , $t_{off}$ (010 s	;)				0.1 s
Resolution of setting $t$ , $t_{on1/2}$ , $t_{off}$ (1099					1 s
Resolution of setting $t$ , $t_{on1/2}$ , $t_{off}$ (1003					10 s
Operating time, voltage tae				<u> </u>	140 ms
Operating time, frequency $t_{ae}$				<u> </u>	335 ms
Response time t <sub>an</sub>				$t_{an} = t_{ae}$	+ton1/2
Recovery time t <sub>b</sub>				≤	300 ms
Displays, memory					
Display	LC disp	lay, mult	ifunction	al, not illu	minated
Display range measured value				AC/DC 0.	500 V
Operating uncertainty, voltage at 50 Hz/60	Hz			1.5 %	, 2 digits
Operating uncertainty voltage in the range	of 1546	0 Hz			±2 digits
Operating uncertainty, frequency in the rar	nge of 15	.460 Hz		±0.2 %,	±1 digit
History memory (HiS) for the first alarm va	lue	d	ata record	d measure	d values
Password			off	/0999	(off/ 0)*
Fault memory (M) alarm relay				on/off/c	on (on)*
Switching elements					
Number		2 x 1 cl	nangeove	r contacts	(K1, K2)
Operating principle				or N/O oper	
K2: Err, $U <$ , $U >$ , Asy, Hz $<$ , Hz $>$ , PHS, S.AL ( $\iota$	undervoltage	U <, asyn	metry Asy	, N/C operat	tion n.c.)*
K1: Err, <i>U</i> <, <i>U</i> >, Asy, Hz <, Hz >, PHS, S.AL					
Electrical endurance, number of cycles					10,000
Contact data acc. to IEC 60947-5-1:					
Utilisation category	AC-13	AC-14	DC-12	DC-12	DC-12
Rated operational voltage	230 V	230 V	24 V	110 V	220 V
Rated operational current	5 A	3 A	1 A	0.2 A	0.1 A
Minimum contact load (relay manufacture	r's reference	2)	1 m.	A at AC/D	C ≥ 10 V
Environment/EMC					
EMC				EN	61326-1
Ambient temperatures:					
Operation				-25	.+55 ℃
Transport				.+70°C	
Storage				-25	.+55 ℃
Classification of climatic conditions ac	c. to IEC 60	0721			
Stationary use (IEC 60721-3-3)	3K23 (n	o conder	sation, n	o formatio	n of ice)
1 '			2K11		
Long-term storage (IEC 60721-3-1)					1K22
Classification of mechanical condition	s acc. to IE	C 60721			
Stationary use (IEC 60721-3-3)					3M11
Transport (IEC 60721-3-2)					2M4
Long-term storage (IEC 60721-3-1)					1M12

Connection	
Connection type	screw-type terminal or push-wire terminal
Connection	screw terminals
Connection properties	
rigid	0.24 mm <sup>2</sup> (AWG 24 12)
flexible	0.22.5 mm <sup>2</sup> (AWG 2414)
Two conductors with the same cross section	
rigid/flexible	0.21.5 mm <sup>2</sup> (AWG 2416)
Stripping length	89 mm
Tightening torque, terminal screws	0.50.6 Nm
Connection	push-wire terminals
Connection properties	·
rigid	0.22.5 mm <sup>2</sup> (AWG 2414)
flexible	
without ferrules	0.752.5 mm <sup>2</sup> (AWG 1914)
with ferrules	0.21.5 mm <sup>2</sup> (AWG 2416)
Stripping length	10 mm
Opening force	50 N
Test opening, diameter	2.1 mm
Other	
Operating mode	continuous operation
Mounting	any position
Degree of protection, internal components (D	IN EN 60529) IP30
Degree of protection, terminals (DIN EN 6052	9 IP20
Enclosure material	polycarbonate
Screw mounting	2 x M4 with mounting clip
DIN rail mounting acc. to	IEC 60715
Flammability class	UL94 V-0
Documentation number	D00137
Weight	≤ 150 g

()\* = factory setting

<sup>\*\* =</sup> The technical data can only be ensured in the operating range of the nominal frequency 15...460 Hz.



## Bender GmbH & Co. KG

Londorfer Straße 65 • 35305 Grünberg • Germany Tel.: +49 6401 807-0 • info@bender.de • www.bender.de

